



PCI-P16R16 V.S. PISO-P16R16U

1

驅動程式與軟體完全不相容

◎PISO-P16R16U 軟體及驅動程式下載位址

<http://www.icpdas.com/download/pci/pisodio/index.htm>

◎The PCI-P16R16 軟體及驅動程式下載位址

<http://www.icpdas.com/download/pci/p16r16/index.htm>

2 PCI-P16R16 及 PISO-P16R16U 函式對映表

PCI-P16R16	PISO-P16R16U
WORD PCI_DriverInit(WORD *wTotalBoards)	WORD PISODIO_DriverInit(void)
	WORD PISODIO_SearchCard(WORD *wBoards, DWORD dwPIOCardID)
WORD PCI_GetConfigAddressSpace(WORD wBoardNo, WORD *TypeID, WORD *wAddress0, WORD *wAddress1, WORD *wAddress2, WORD *wAddress3, WORD *wAddress4, WORD *wAddress5)	WORD PISODIO_GetConfigAddressSpace(WORD wBoardNo, DWORD *wAddrBase, WORD *wIrqNo, WORD *wSubVendor, WORD *wSubDevice, WORD *wSubAux, WORD *wSlotBus, WORD *wSlotDevice)
void PCI_DO16(DWORD BaseAddr, DWORD OutData)	void PISODIO_OutputByte(DWORD wPortAddr, WORD bOutputValue)
DWORD PCI_DI16(DWORD BaseAddr)	WORD PISODIO_InputByte(DWORD wPortAddr)
void PCI_DriverClose(void);	void PISODIO_DriverClose(void);

3 PCI-P16R16 及 PISO-P16R16U Digital I/O 範例

PCI-P16R16	PISO-P16R16U
//Output 0x1234 PCI_DO16(wAddress2, 0x1234)	//Output 0x1234 PISODIO_OutputByte(wAddrBase+0XC0,0x34) PISODIO_OutputByte(wAddrBase+0XC4,0x12)
//Input Port Value InVal = PCI_DI16(wAddress2)	//Input Port Value InValL=PISODIO_InputByte(wAddrBase+0XC0) InValH=PISODIO_InputByte(wAddrBase+0XC4) InVal = (InValH<<8) (InValL) //InValH*256+InValL
下載範例程式 http://ftp.icpdas.com/pub/cd/iocard/pci/napdos/pci/pci-p16r16/dll_ocx/demo/	下載範例程式 http://ftp.icpdas.com/pub/cd/iocard/pci/napdos/pci/piso-dio/dll_ocx/demo/