


Table of Contents

1. Un-install DAQCard for Win2000	2
1.1 Remove hardware	2
1.2 Remove software	6
1.3 Delete oem?.inf & oem?.pnp	9
2. Un-install DAQCard for Win95	13
2.1 Remove Hardware	13
2.2 Remove software	15
2.3 Delete ICPDAS CO.LTD?.INF.....	18

1. Un-install DAQCard for Win2000


1.1 Remove hardware

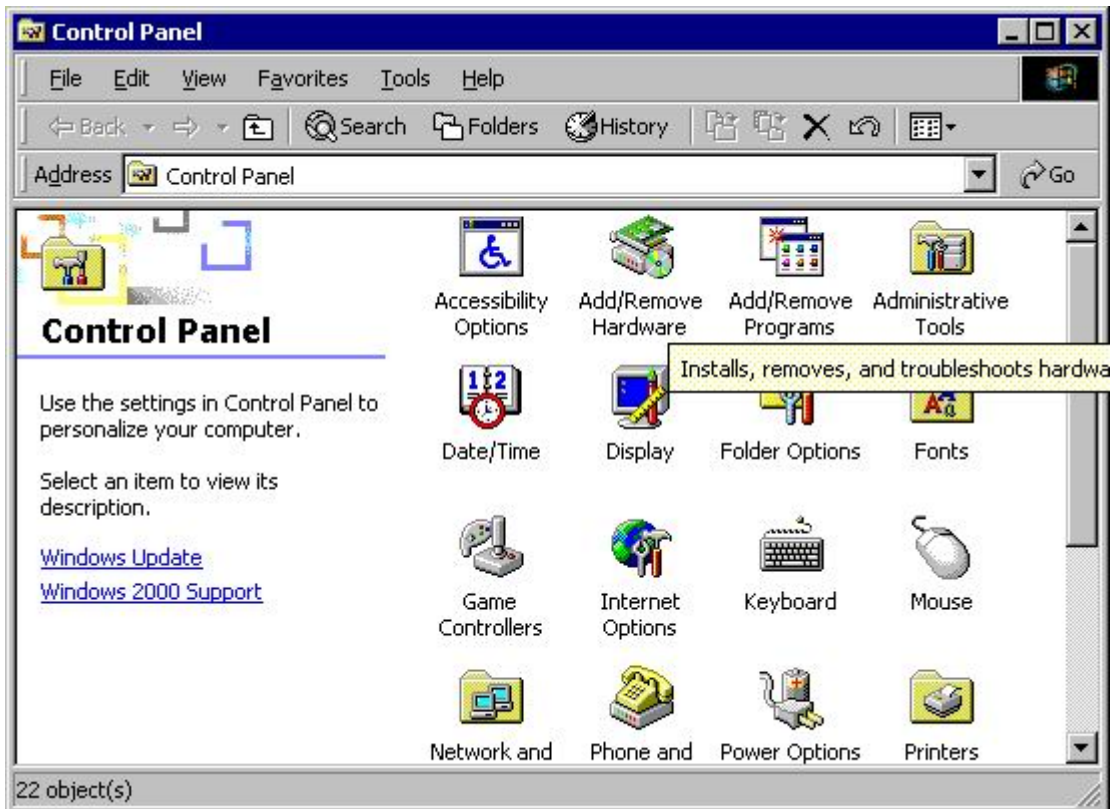


1. Open control panel, select Add/Remove Hardware




2.click “Next”

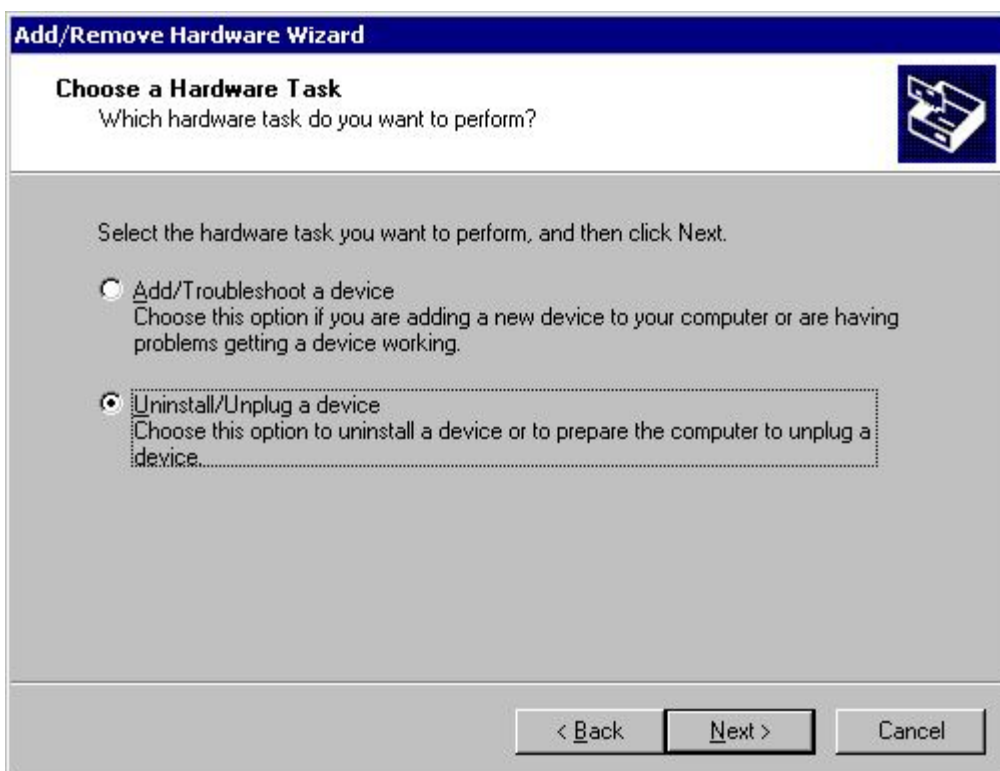


3.select uninstall/unplug a device, then click “Next”

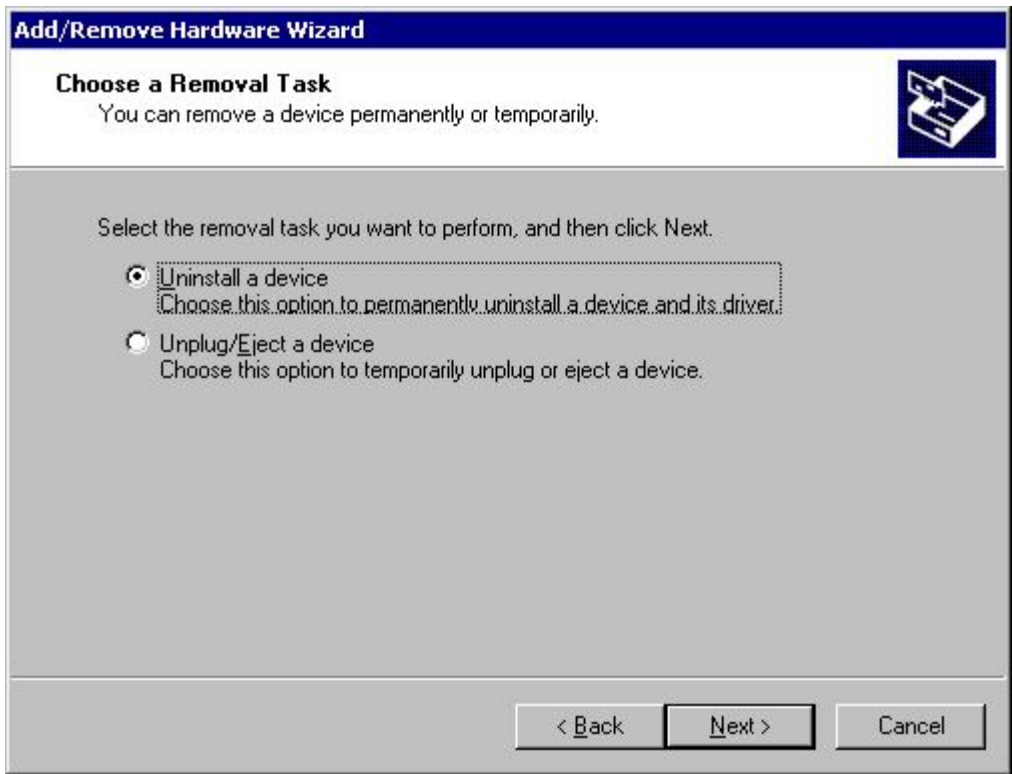

4. select uninstall a device, click “Next”

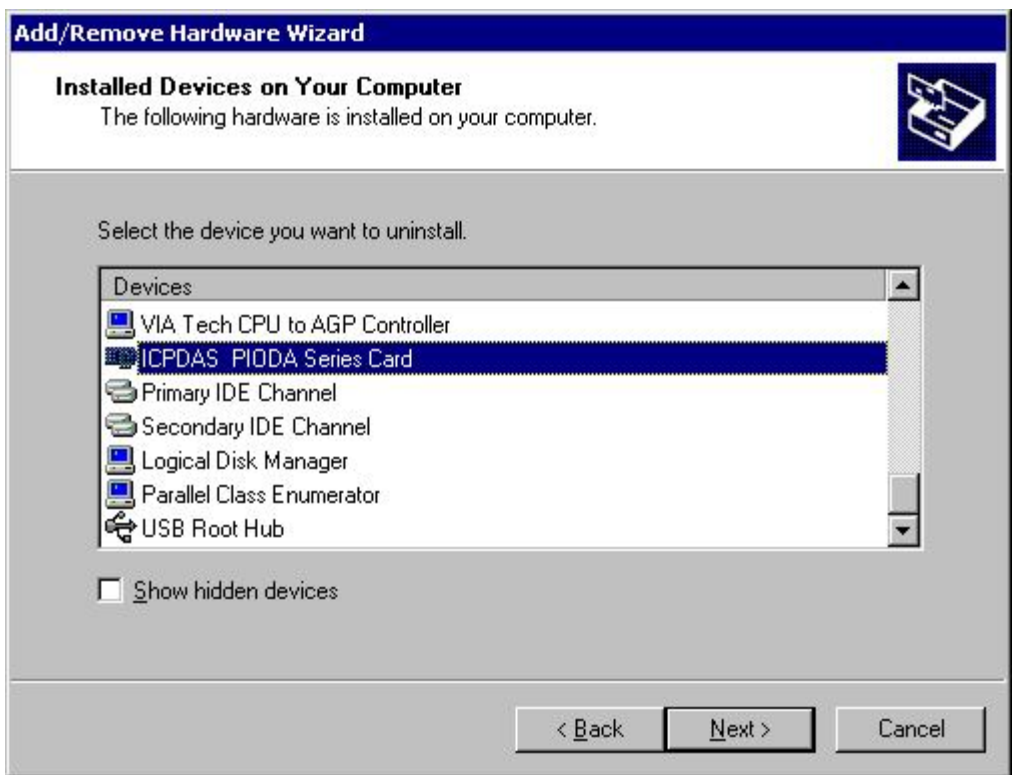

5. Select ICPDAS DAQCard, then click “Next”

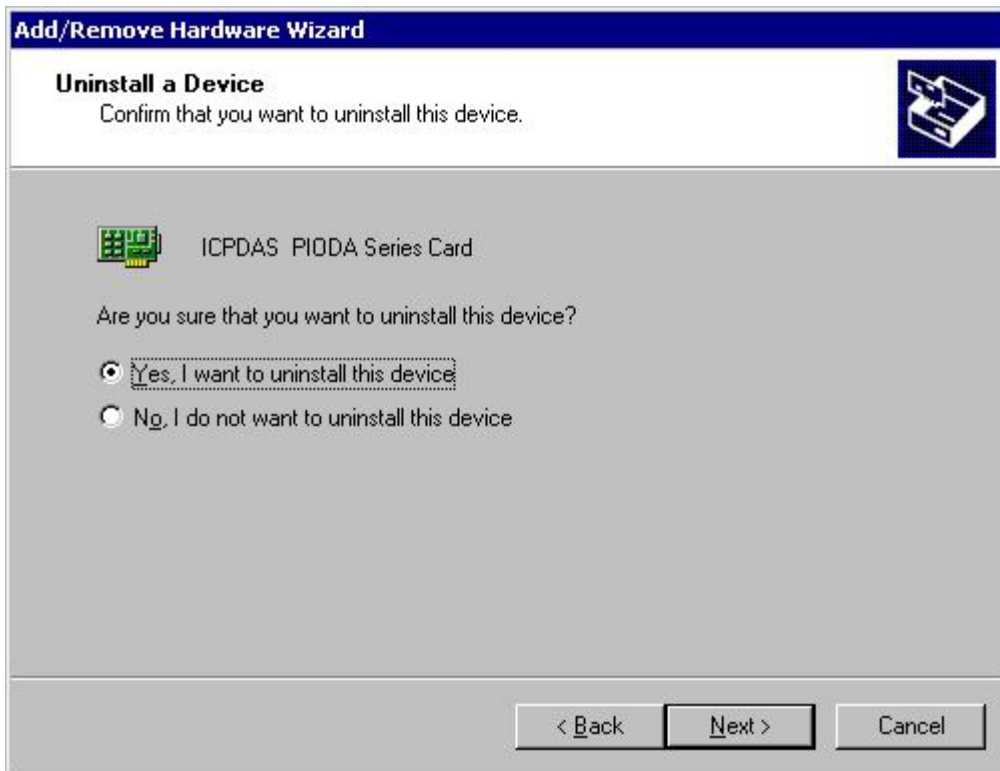

6. Select “Yes”, then click” Next”




7. Click “Finish”.

1.2 Remove software




1. open control panel, then select Add/Remove program

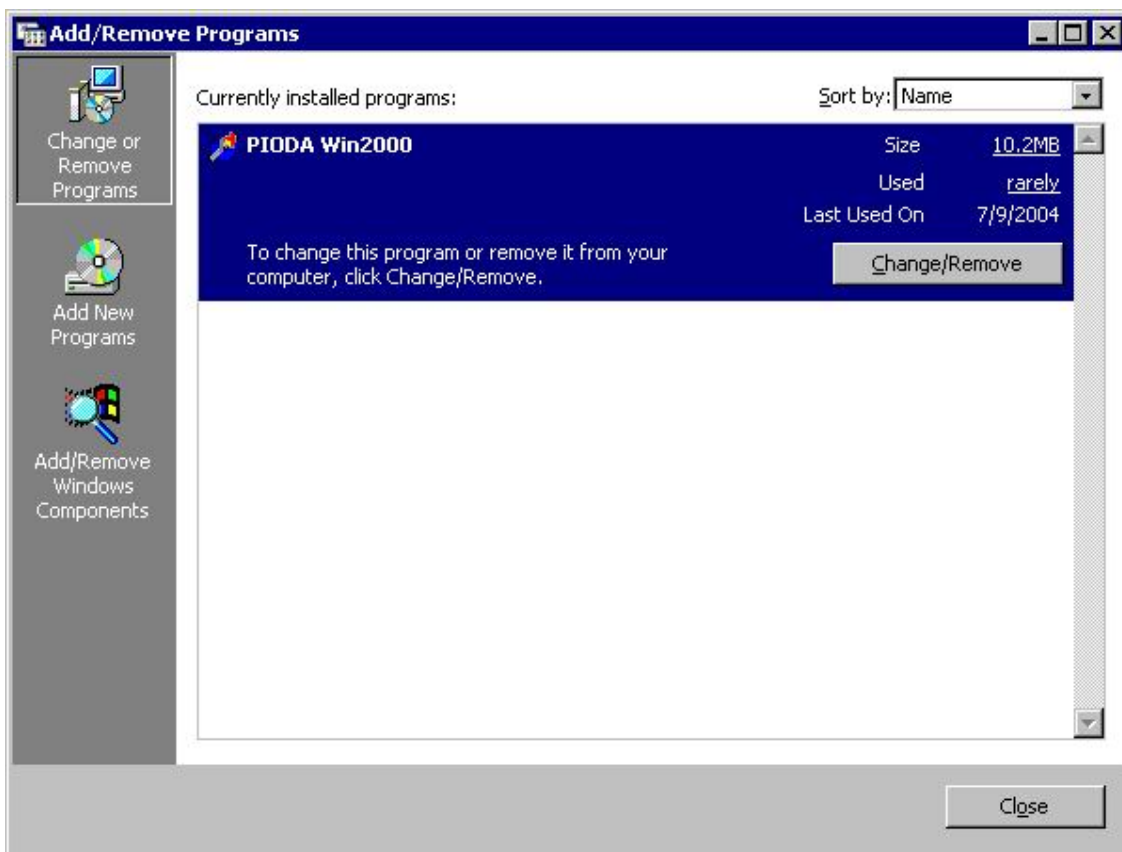


2. select DAQCard, then click "Change/Remove"



3. Click "Yes"

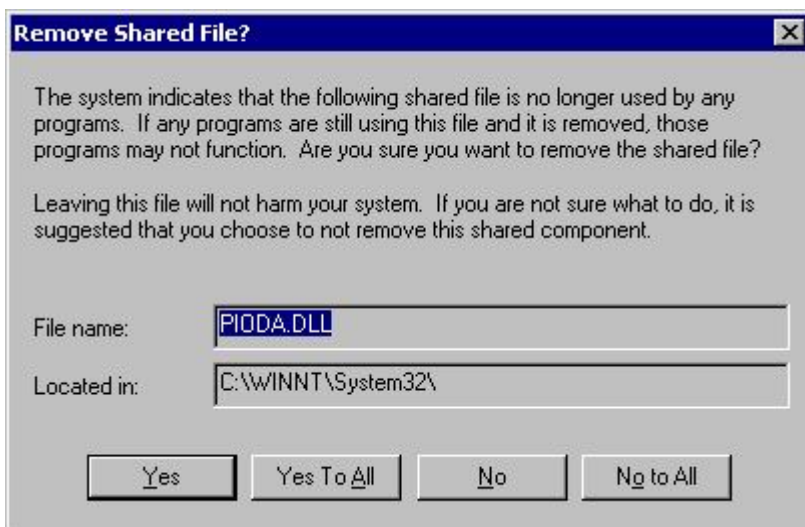

4. Click "Yes to All"

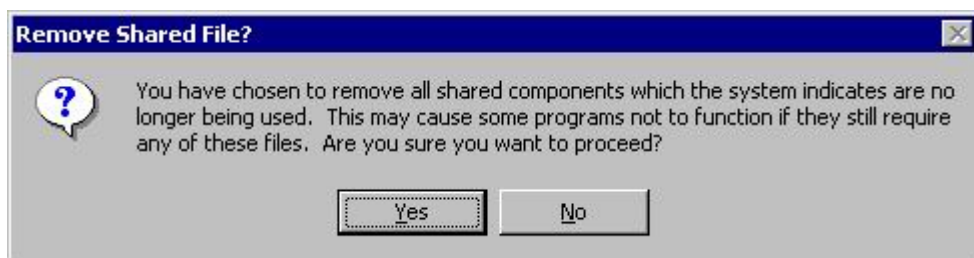


5. Click "Yes"




6. Click "OK", then click "Close"


1.3 Delete oem?.inf & oem?.pnp

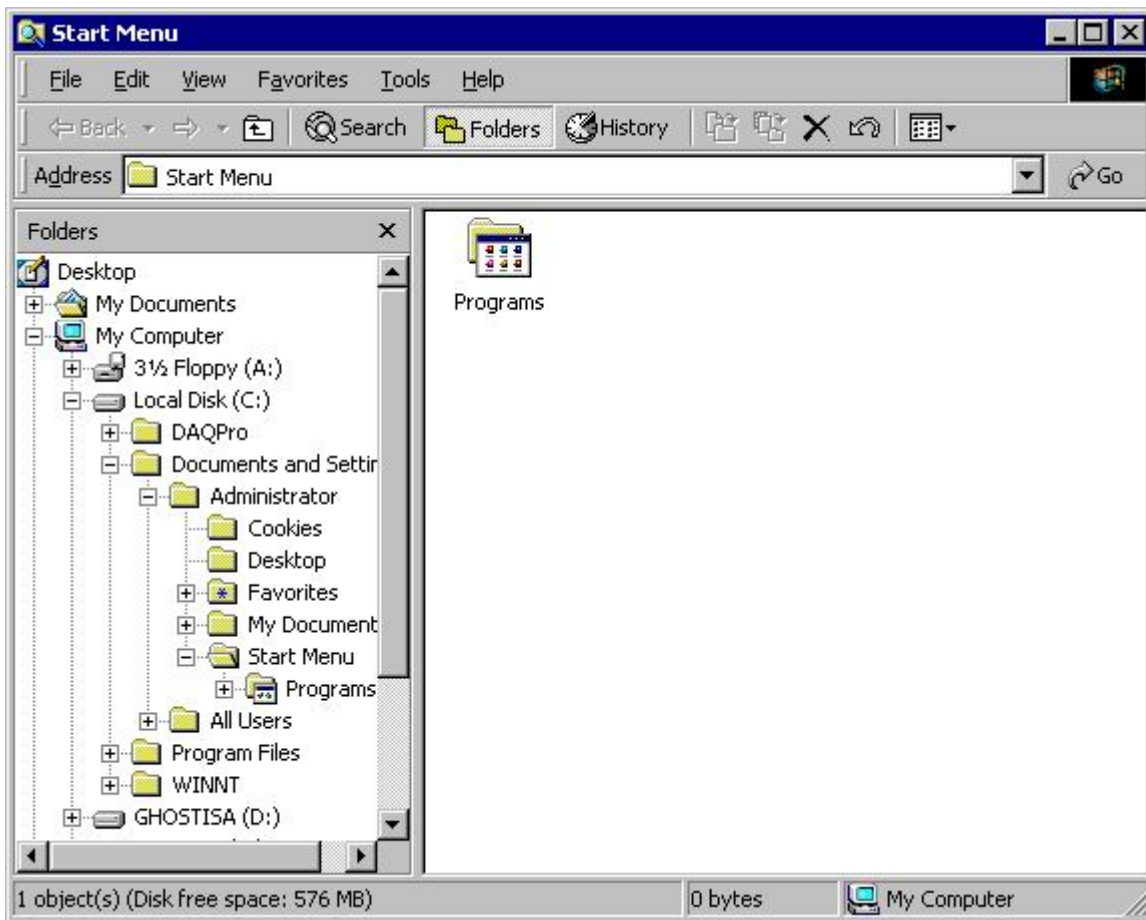

1. Open explore, select Tools->Folder Options..

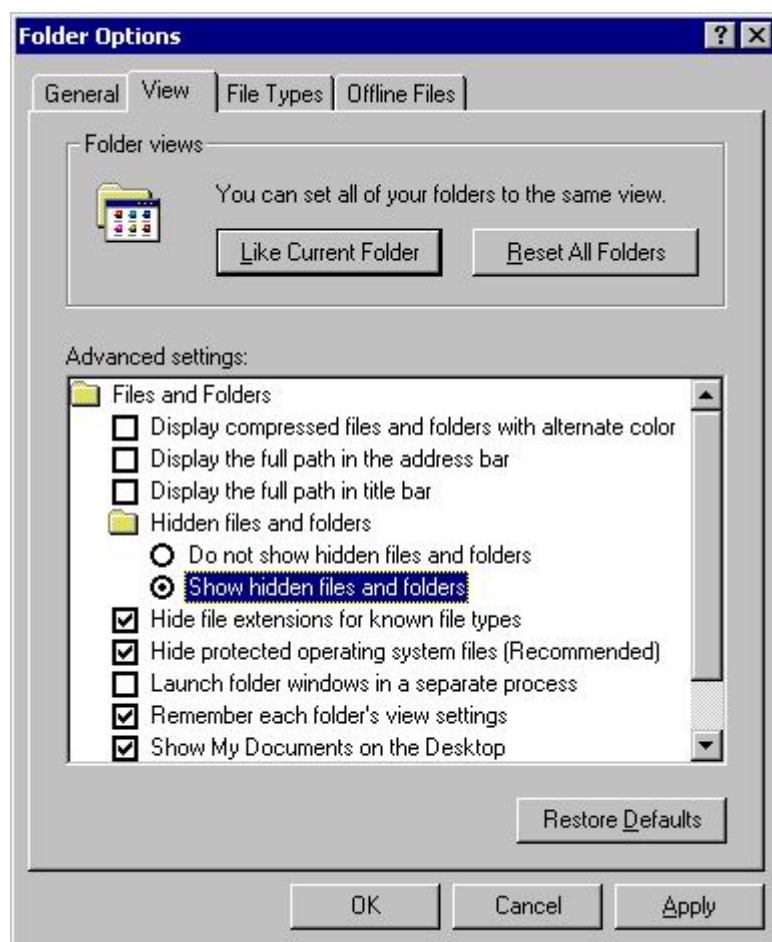

2. Select Show hidden files and folder, then click “OK”

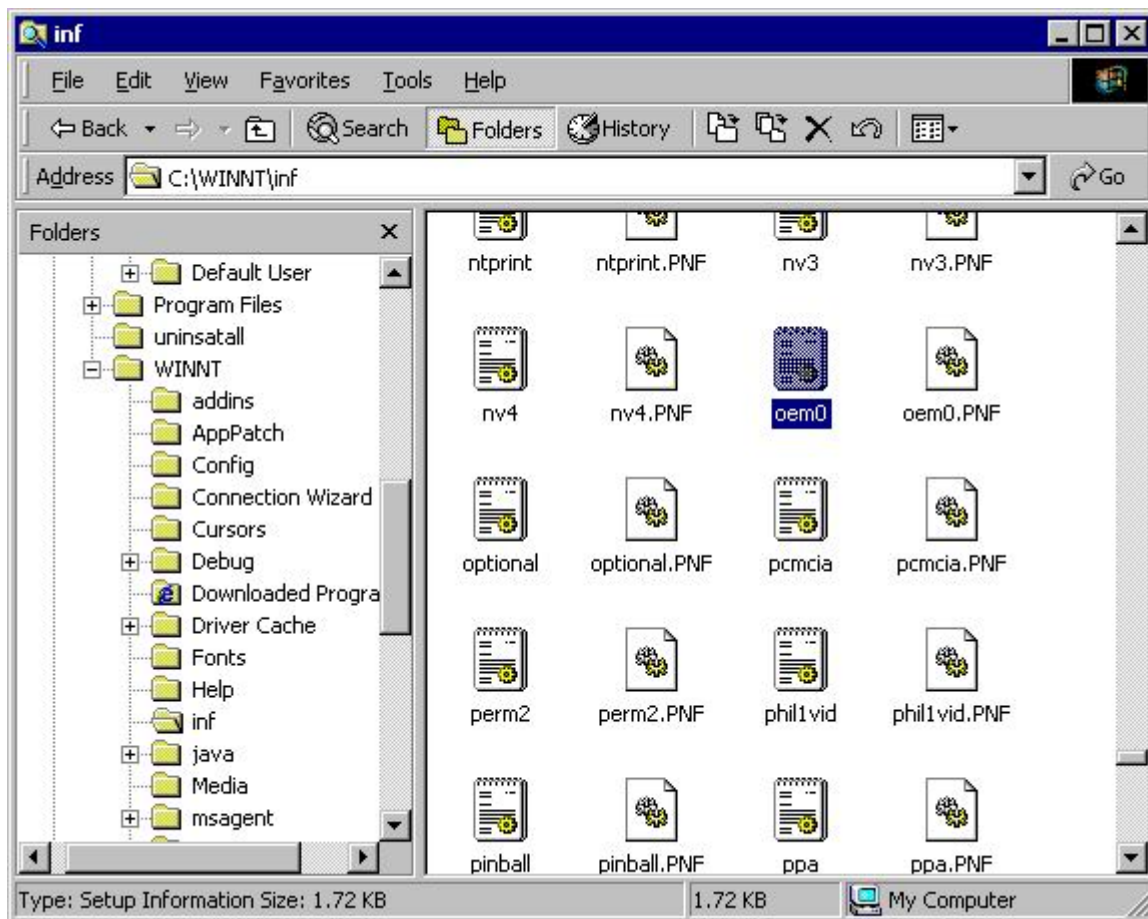

3.find oem?.inf which contains the DAQCard install information.

```
oem0 - Notepad
File Edit Format Help
; install information file for PIO-DA

[Version]
Signature="$windows NT$"
Class=DAQCard
ClassGuid={337B6A7D-6400-4a90-AF29-9924EE97532F}
Provider=%Company%
DriverVer=02/10/2000,1.0.0.0

[ClassInstall32]
AddReg=DAQCardClassAddReg

[DAQCardClassAddReg]
HKR,,,"DAQCard"
HKR,,Icon,, -5

[Manufacturer]
%Company% = SECTION_0


[SECTION_0]
%Product%=PIODA.Install, PCI\VEN_E159&DEV_0002&SUBSYS_00040080

[DestinationDirs]
PIODA.Files.Driver=10,system32\Drivers
PIODA.Files.Driver.NTx86=10,system32\Drivers
```


4. Select oem?.inf & oem?.PNF then delete them.

2. Un-install DAQCard for Win95

2.1 Remove Hardware

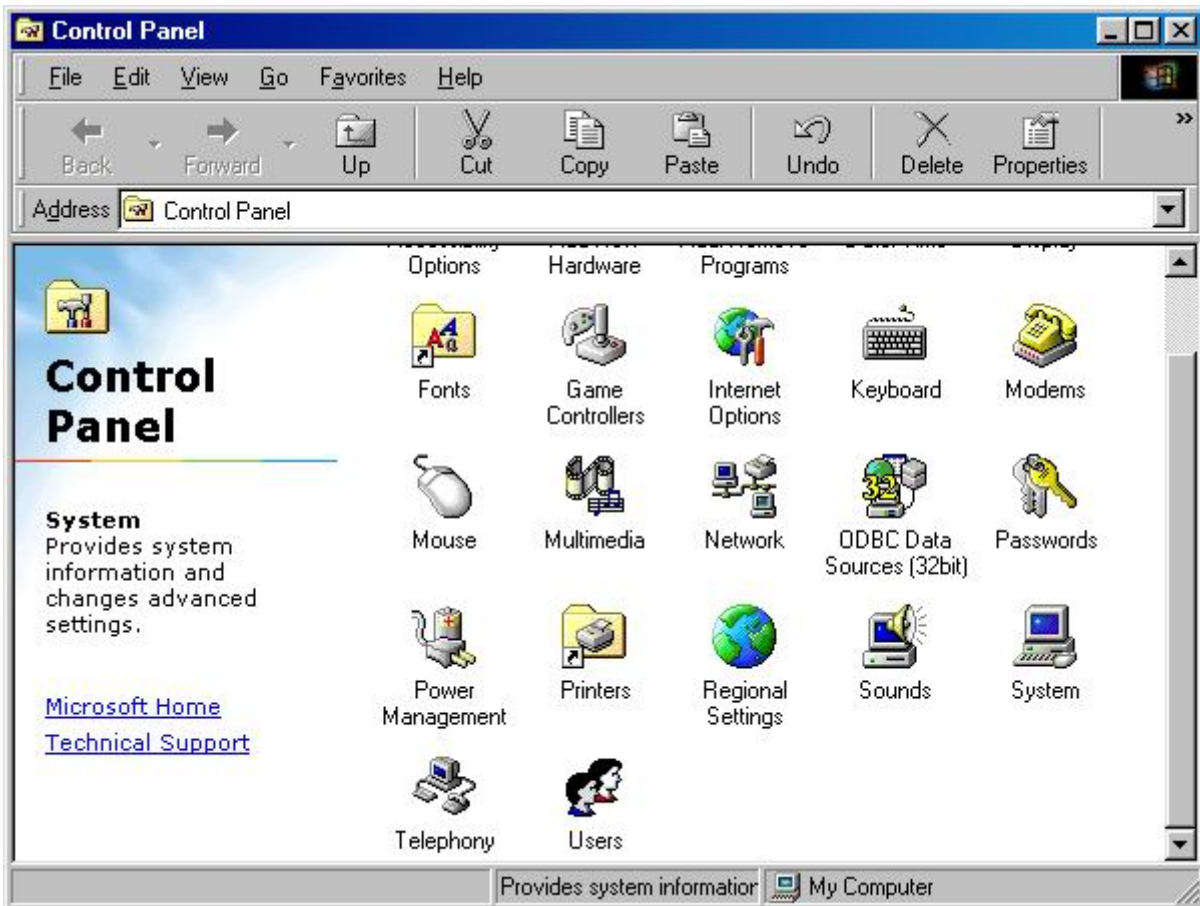

1. Open control panel->select system

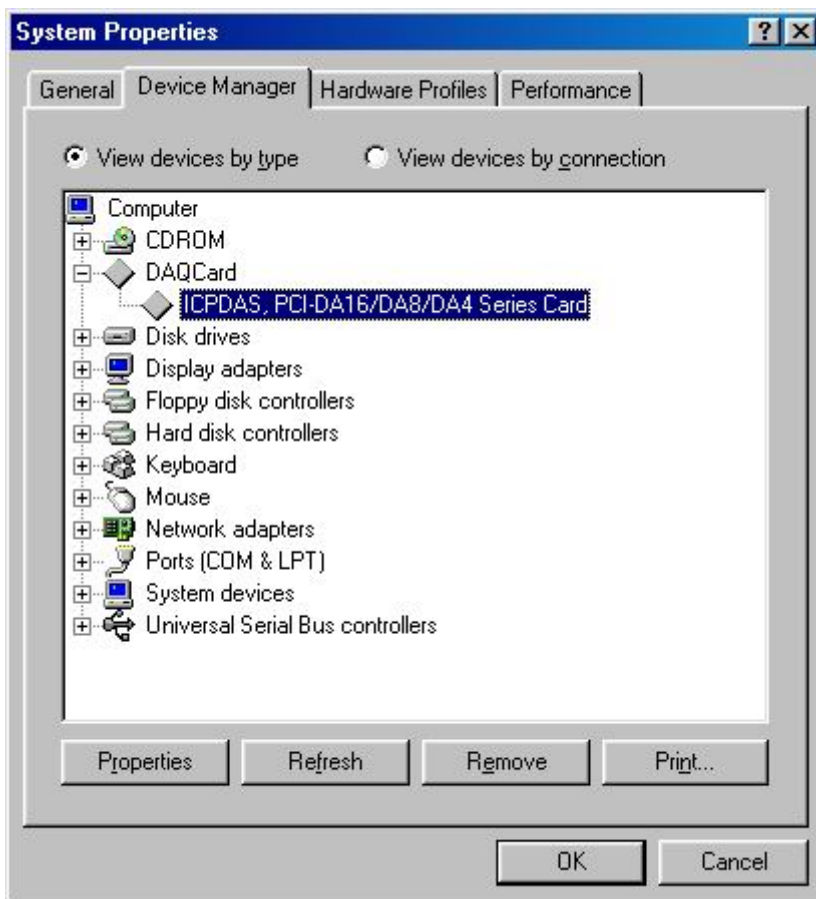

2. Select DAQCard, then Remove




3. click "OK", then click "OK" and finish.


2.2 Remove software




1. Open control panel->select Add/Remove Program

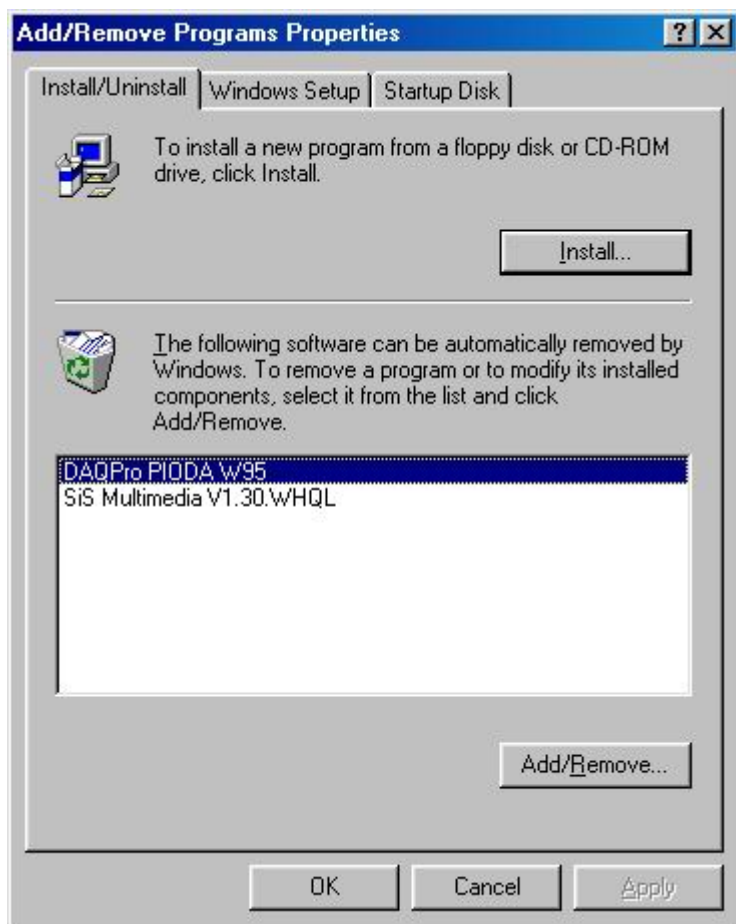

2. Select DAQCard ,then click” Add/Remove”

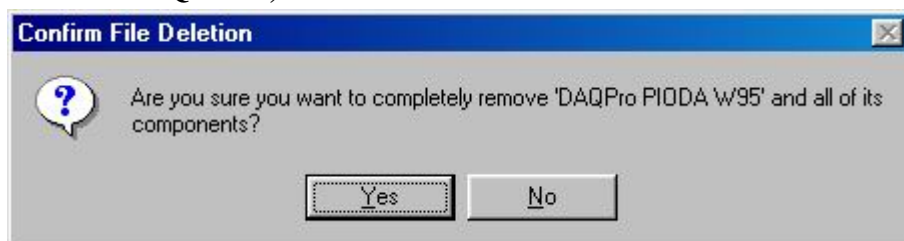

3. Click “Yes”

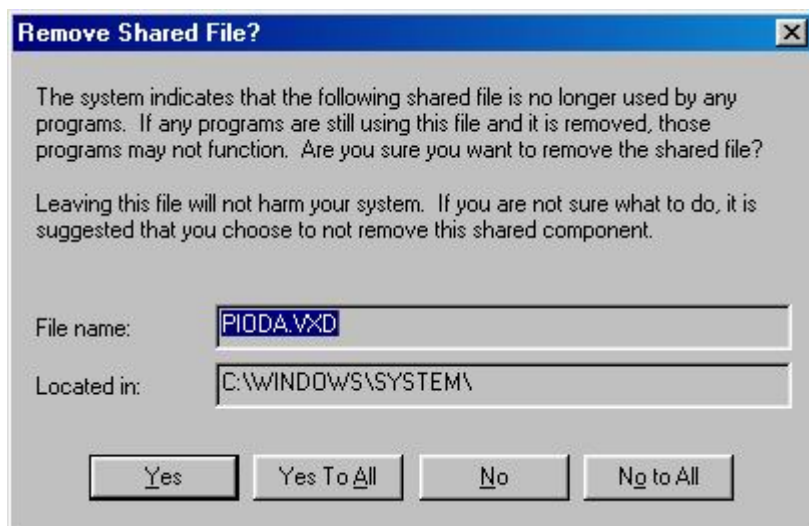

4. Click "Yes To All"




5. Click "OK", then click "OK" and finish

2.3 Delete ICPDAS CO.LTD?.INF




1. Open explore->view->Folder Options..

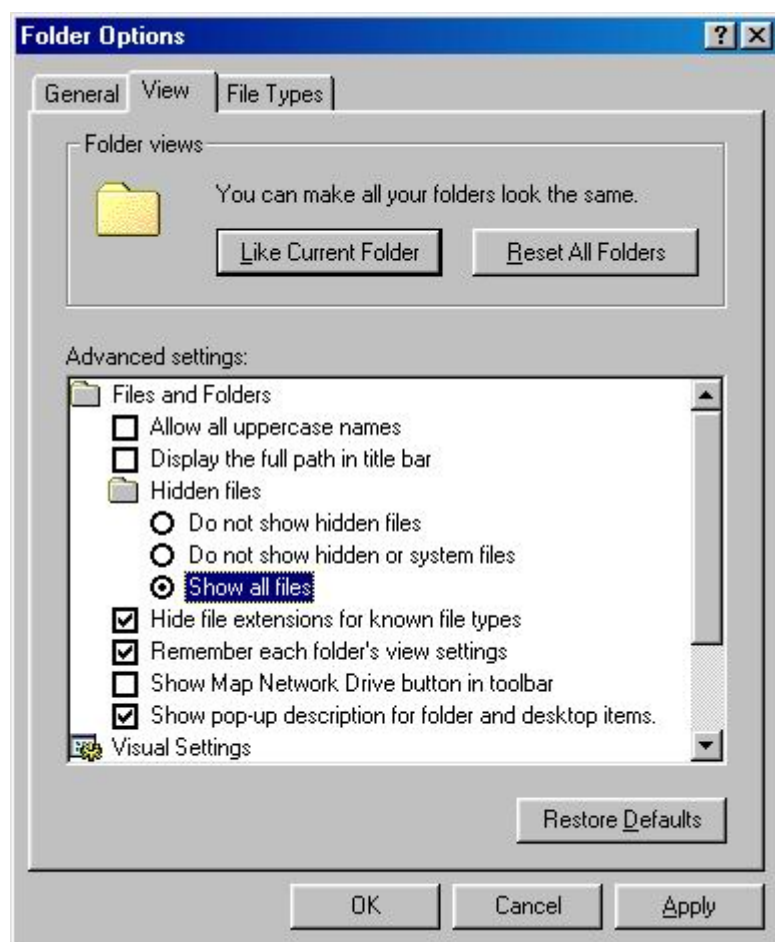

2. Select “Show all files”

Uninstall DAQCard

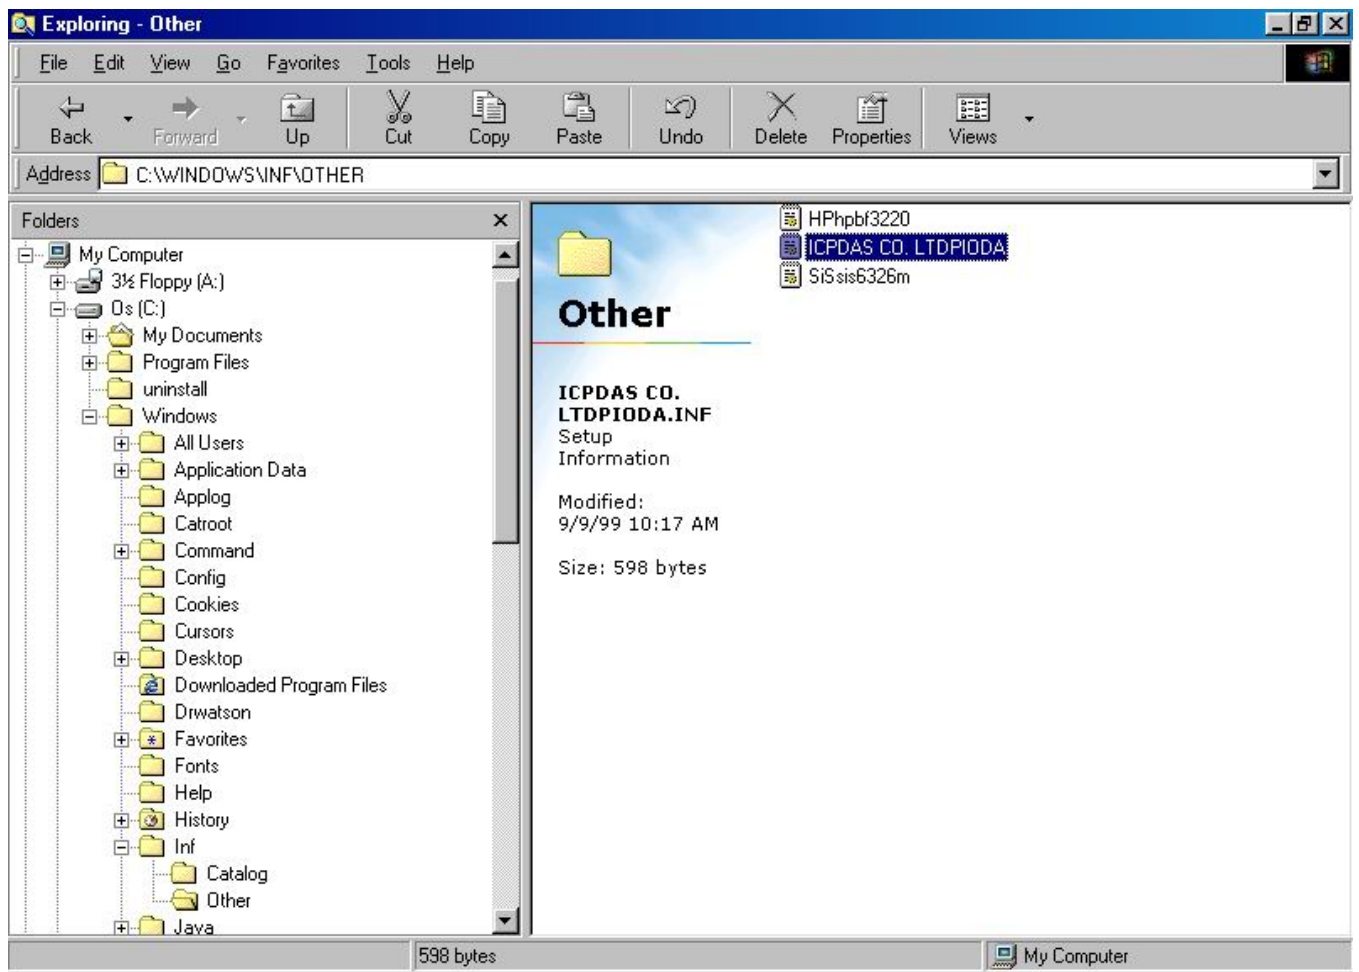

3.Delete “ICPDAS CO.LTD?.INF” which you want to uninstall DAQCard.